



## Programming a Pager



### 4.1.1 Specifications

- Dimensions: 3"x 2"x .75"
- Weight: 3 oz.
- Power: 1 – "AA" battery
- I/O:
- Programming: Power On Display – programmed by VersaCall all other configurations can be changed via front key pads.

### 4.1.2 Programming

1. Turn off the pager and remove the battery.
2. Hold the ( | | ) button and re-insert the battery.
3. Keep holding the ( | | ) button until the password screen appears.
4. Enter the password (default is 0000) and press power to select.

5. **To adjust frequency**, use the right arrow button to move cursor and the ( | | ) button to change value, press power when finished.
6. **To adjust cap code**, use the right arrow to move cursor and the ( | | ) button to change value. Leave the last four characters as AAAA. Push power when finished.
7. If you want multiple cap codes repeat step 6 for the other desired cap codes.
8. Select Baud rate as 512 by using the ( | | ) to change between values. Push power when finished.
9. If desired, you can modify your password by using the right arrow button to move cursor and the ( | | ) button to change values. Press power when finished.
10. Adjust contrast by using the ( | | ) button. Press power when finished.
11. Screen should display "pass!" message to show successful programming of the VersaCall Gold Pager.
12. Programming is complete.